



Speaker Stand Assembly

Contents: 2-Tops 2-Bases 2-Tubes 16-Screws

Step 1

INSTALL BASE TO THE TUBE UPSIDE DOWN



Start by pushing 2 mounting screws through the bottom of the Base until the heads are flush and the threads have protruded completely.

Align these with screw holes in the Tube.

Tighten about 1/2 way, then install the other 2 screws. (They should automatically align with the holes)


Once all 4 screws have been "started", finish by tightening all of the screws until their heads are flush and the pieces are firmly connected. When using a power tool/screw gun/drill, make sure to put it on a low torque setting.

DO NOT OVER TIGHTEN!

Step 2

TURN IT OVER * See note below

Install the top the same as the bottom, with the bevel facing down starting with 2 screws protruding, and adding the other 2 once alignment is achieved.

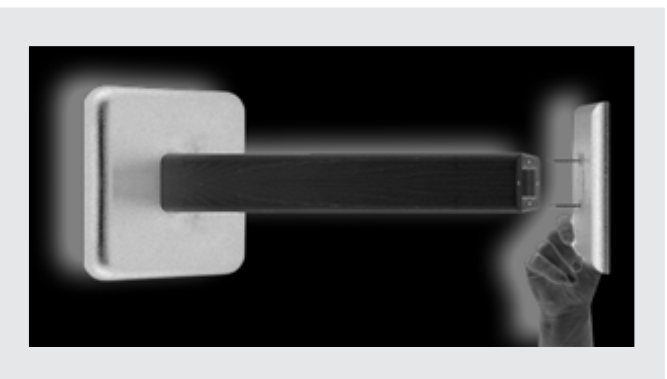

* Now is the time to fill the Tube with DRY sand to promote stability as well as arrest resonant frequencies and enhance "de-coupling".

"Play Sand" is recommended over typical landscaping sand because it has a very low moisture content. Using a standard grade sand will void any implied warranty. Please feel free to call for advice.

Step 3

ALMOST THERE

Make sure all screws are firmly secured and heads are flush or slightly below the surfaces. Any pad or double sided tape should be applied now. This will also help "de-couple" the speaker from the stand and floor.

When Speaker Stands are located on carpet, "nestle" the stand in it's desired position by gently pushing down and twisting.

